

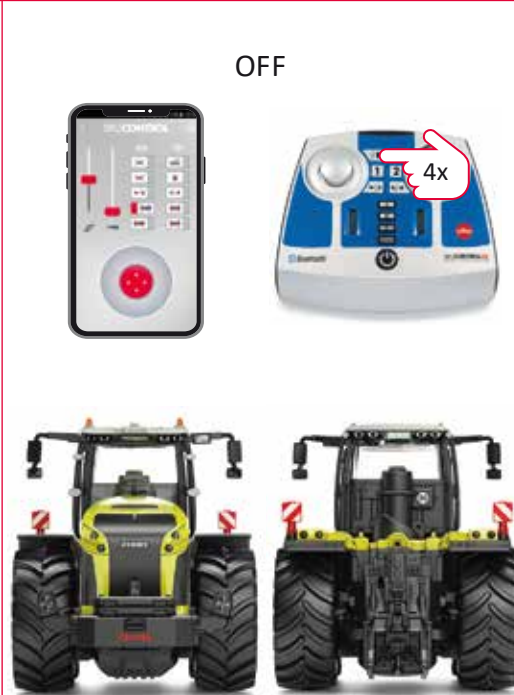
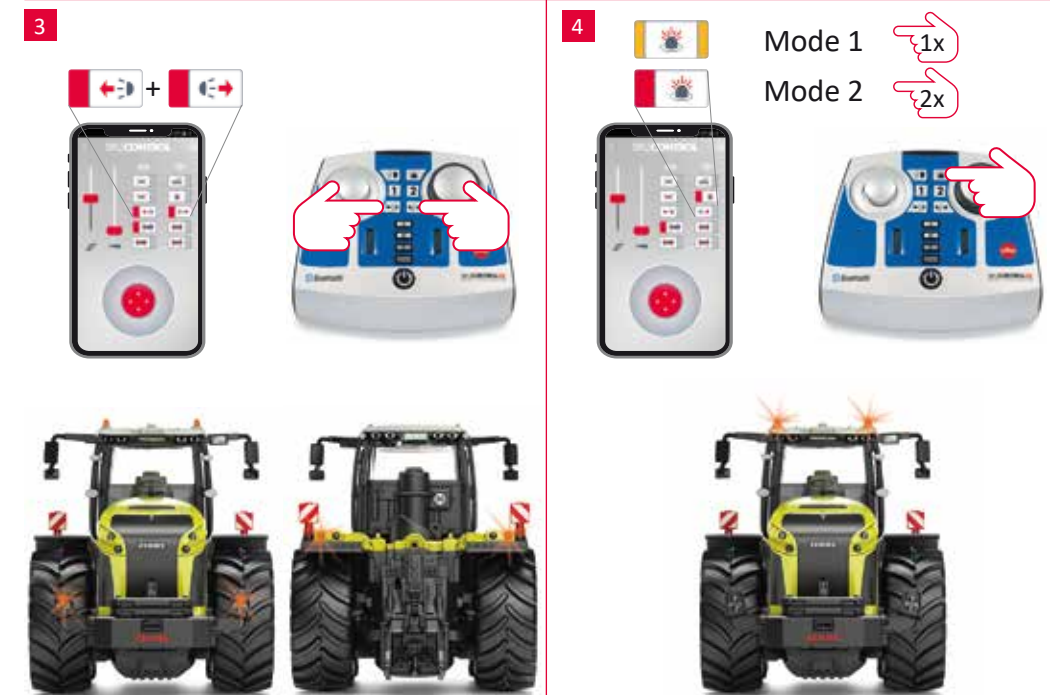



H Licht / Lights / Lumière / Luces / Verlichting

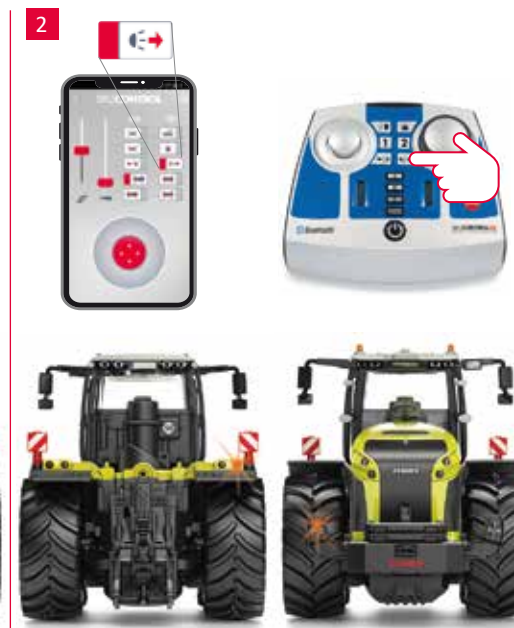


I Blinken / Flashing / Clignotement / Intermitentes / Knipperen

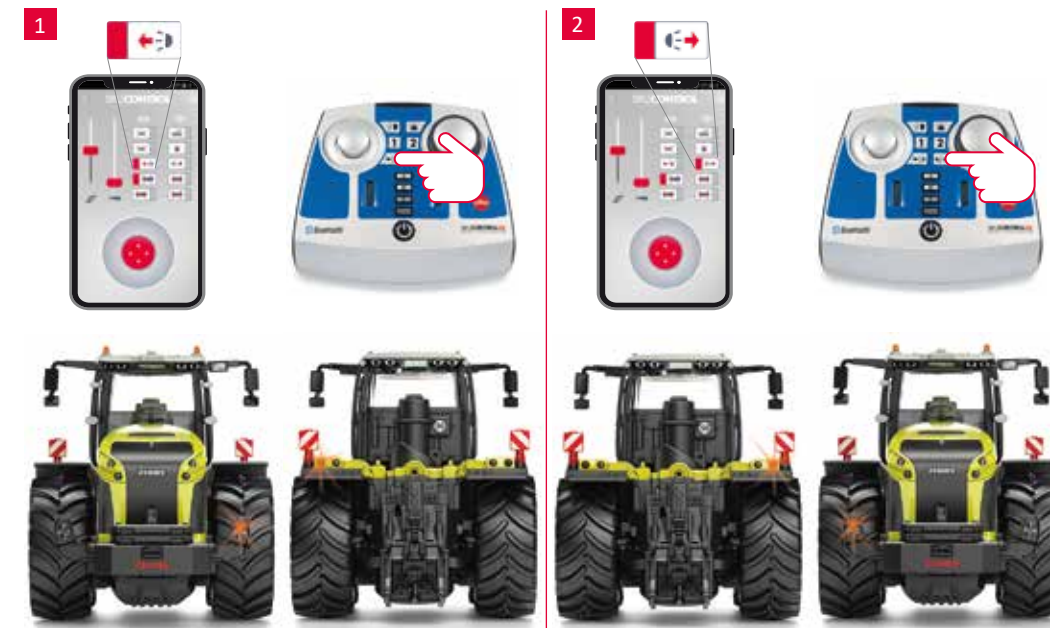


J Front-Anbaugerät wechseln / Change front attachment device / Remplacer un outil rapporté frontal / Cambiar equipo adicional frontal / Aanbouwapparaat voor wisselen

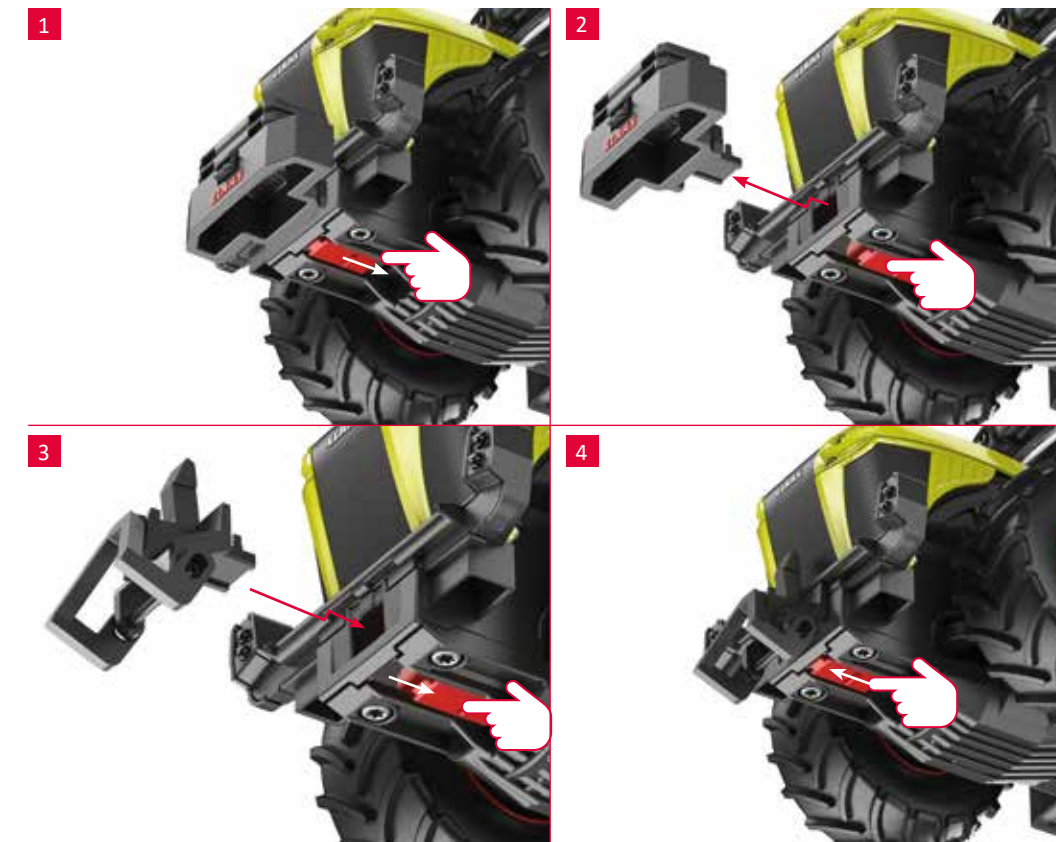

L Eigenen Modellnamen vergeben / Assign your own model name / Attribuer des noms de modèles propres / Asignar un nombre de modelo propio / Eigen modelnaam geven

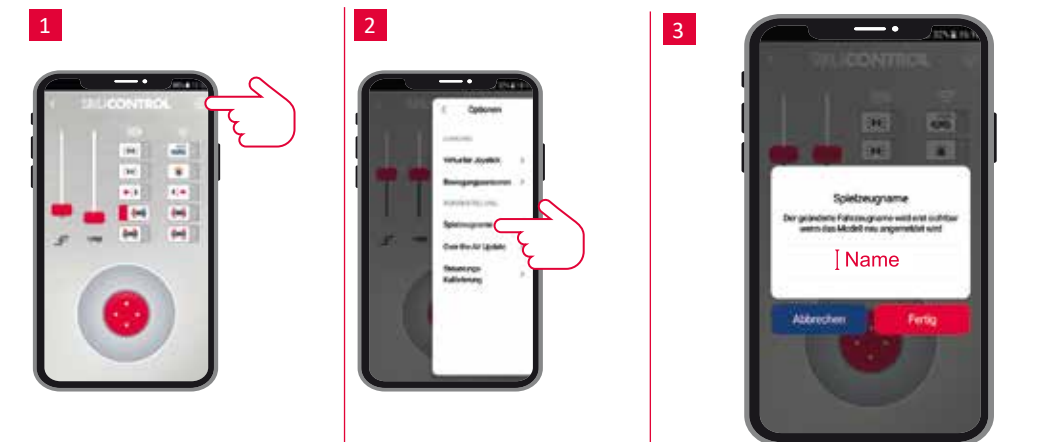

K Lenkjustierung / Steering adjustment / Ajustage de la direction / Ajuste de dirección / Stuurinrichting afstellen

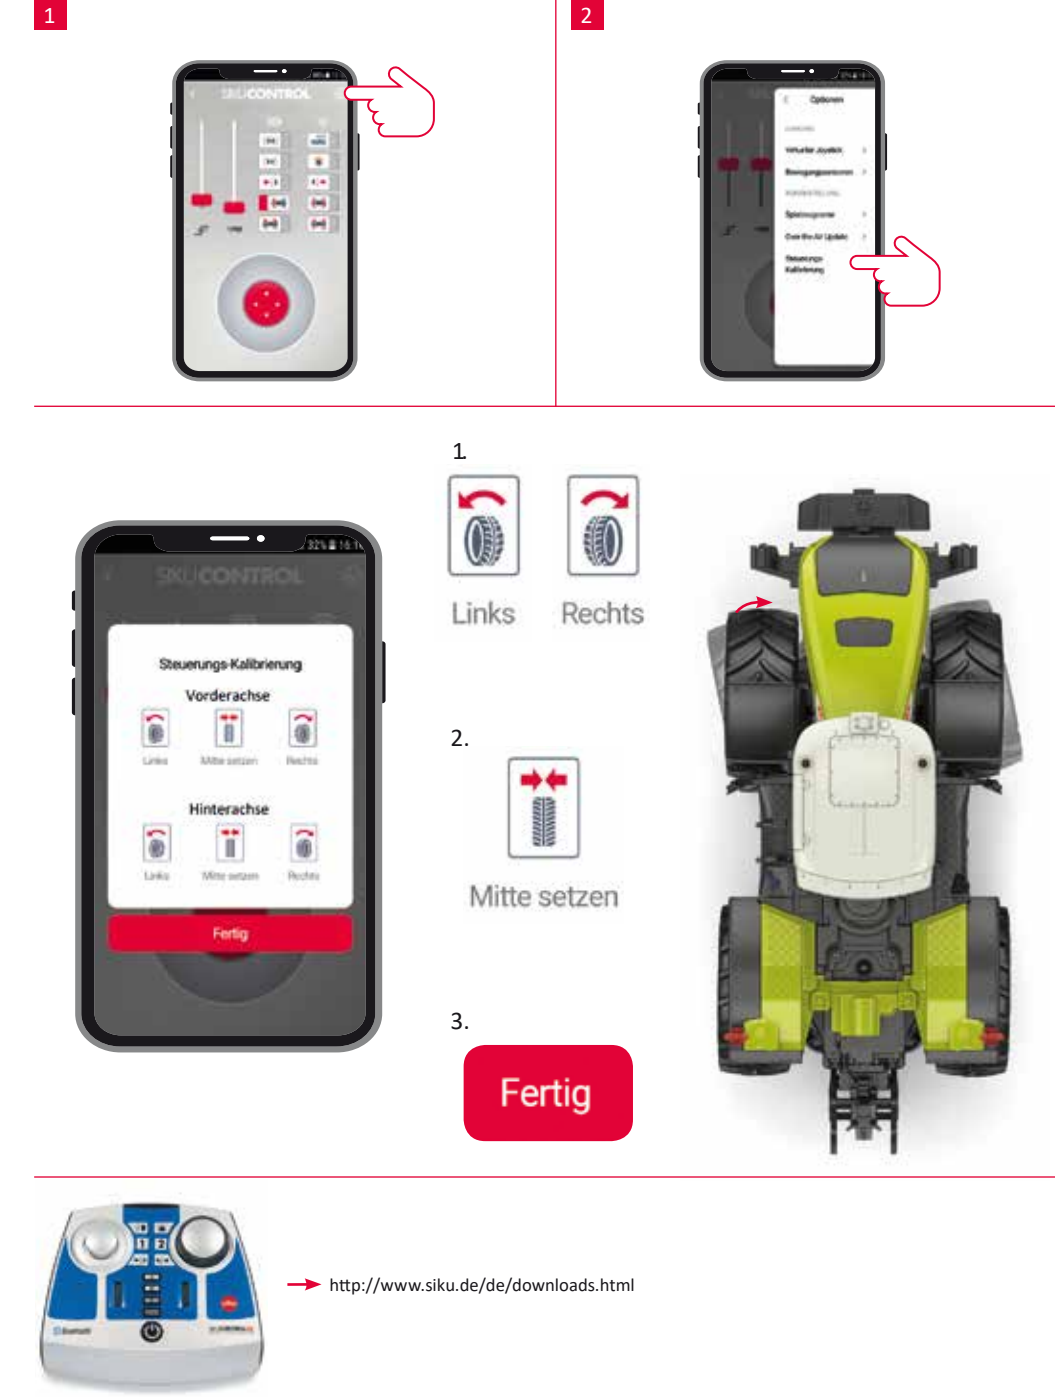

SIKUCONTROL

Bedienungsanleitung 6791 / Operating instructions for 6791
Mode d'emploi 6791 / Instrucciones de uso 6791
Gebruikshandleiding 6791



A Batterien einlegen / Inserting the batteries / Colocación de las pilas / Baterijen plaatsen

Placer les piles /

