





B Systemstart / System start / Démarrage du système / Inicio del sistema / System starten

1 Download SIKCONTROLAPP:  

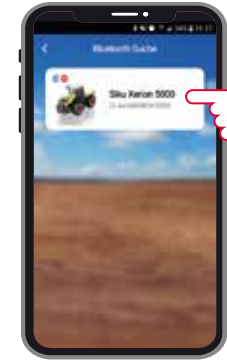

1.  2. 


2.  OFF/ON



3.  



4.  

C Systemstart / System start / Démarrage du système / Inicio del sistema / System starten

1.  ON/OFF



2.  OFF/ON



3.  



4.  



D Lenk-Modus / Steering mode / Mode direction / Modo de dirección / Besturingsmodus



Start mode



 1x 



 

 2x 

 3x 

E Steuerung / Control / Commande / Control / Besturing


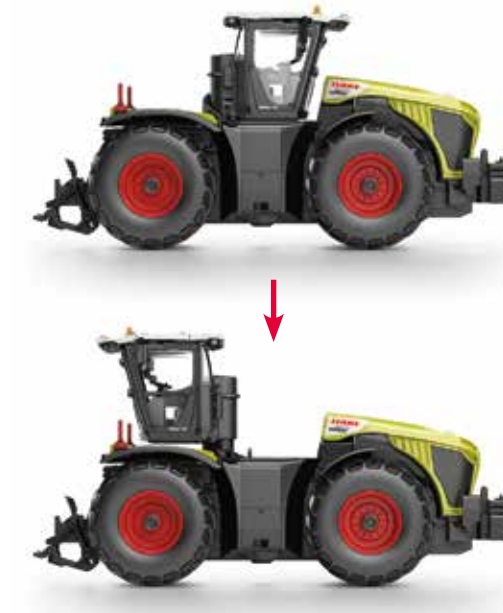
 

oder / or / ou / o / of

1.  

2.   Stop

F Kabine drehen / Rotate the cab / Tourner la cabine / Girar cabin / Cabine draaien

G automatisch Kuppeln / Automatic coupling / Attelage automatique / Acoplamiento automático / Automatisch koppelen

